

2. Regardless of whether counting Frames or Feet, move additional 3 or 4 places on Frames dial to give the leader of exposed film needed to attach the loaded cassette to your camera.


#### INSTRUCTIONS FOR REMOVAL OF LOADED CASSETTE

3. Loosen film compartment knob (#2).
4. Rotate film storage cover (#4) to CLOSE position.
5. Open film access door (#3).
6. Cut film approximately 1 inch from loaded cassette.
7. Lift cassette spool holder knob (#8) and film crank (#10) from cassette spool and remove loaded cassette.

You are now ready to repeat the loading operations for additional cassettes. Following these instructions carefully will lead to perfectly loaded cassettes.

#### Note

Some cassettes are mechanically closed, for these, when loading is finished, the cassette closing knob (#8) is turned (counterclockwise) in direction of arrow to lock the cassette.

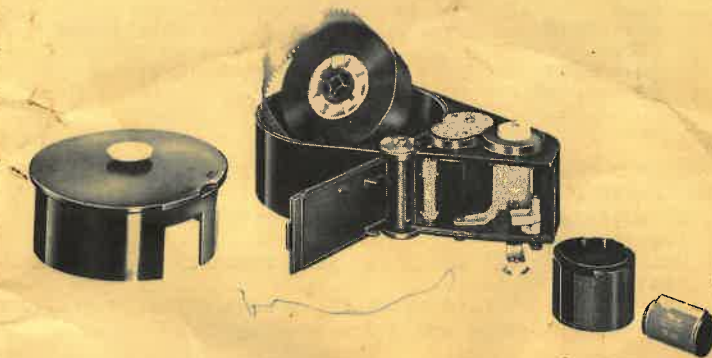

# ALDEN 200

## 35mm Bulk

## Film Loader

MANUFACTURED BY

*Queen City Plastics Inc.*

4415 APPLETON ST. CINCINNATI, OHIO 45209

MADE IN U. S. A.

PATENT APPLIED FOR

- |                    |                         |
|--------------------|-------------------------|
| 1. Case            | 8. Cassette Knob        |
| 2. Roll Cover Knob | 9. Sprocket             |
| 3. Door            | 10. Winding Crank       |
| 4. Roll Cover      | 11. Black Adapter Screw |
| 5. Interlock       | 12. Red Adapter Screw   |
| 6. Feet Dial       | 13. Cassette Adapter    |
| 7. Frame Dial      | 14. Latch               |

### INSTRUCTIONS

Prepare a closet, dark room, or changing bag, in following order:

- A. On a table place the 200 Loader with access door (3) towards you.
- B. Unscrew knob (2) and place approximately in the top center of the table.
- C. Rotate film storage cover (4) clockwise to stop (Close position). Remove and place over knob (2)

The following steps are to be done in total darkness.

- D. Open new bulk film. Place over center spindle in main body so film unrolls counter-clockwise. The emulsion surface will be away from you.
- E. Thread approximately 4 inches of film thru slot in main body over sprocket (9) in loading compartment.
- F. Replace roll cover (4). Rotate clockwise to stop (CLOSE position). Replace knob (2) and tighten.

### INSTRUCTIONS FOR LOADING CASSETTES


NOTE: ALL STEPS FROM HERE ON ARE DONE IN LIGHT CONDITIONS

1. With film storage cover (#4) in CLOSE position, open film access door (#3) as far as possible.
2. Prepare film tab which projects from magazine for attachment to your cassette spool in the proper manner.
3. Adjust into position and lock cassette adapter (#13) for whatever type of cassette you are loading.

For loading Nikon 50-ft. cassette:

- 1) Loosen black knob (#11) one-half turn
- 1i) Loosen red knob (#12) six turns until adapter is free;
- 1ii) Rotate adapter (#13) to left as far as it will go;
- 1iv) Tighten black knob (11).

Loader is now ready for loading Nikon 50 ft. cassettes

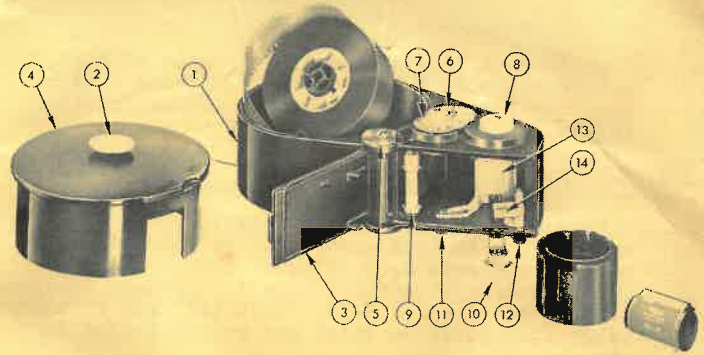

For loading 36 exposure standard cassettes

- 1) Loosen black knob (#11)
- 1i) Rotate adapter (13) to right to stop in position over (#12) red knob screw.
- 1ii) Tighten red knob (12)

Loader is now ready for loading standard 36 exposure cassettes.

4. Attach film to cassette spool in proper manner and replace cover on cassette.
5. Lift cassette spool holder knob (#8) and withdraw film crank (#10) and place cassette in holder. Release spool holder knob and film crank.
6. Move latch (#14) down against cassette.
7. Close film access door (#3)
8. Loosen film compartment knob (#2) and rotate film storage cover (#4) counter-clockwise to OPEN position.

### INSTRUCTIONS FOR LOADING CASSETTES

9. Tighten film compartment knob (#2).
10. Move counting dial (#7) for Frames to 47 or Feet dial (#6) between 24 and 0. Engage and turn winding crank until the desired counting dial moves to 0. This will give you your leader.
11. Hold cassette holder knob (#8) down with one hand and with the other hand turn crank (#10) clockwise to wind as many frames or feet you need.